




Spare Parts

Unique Single Seat Valve - Tank Outlet

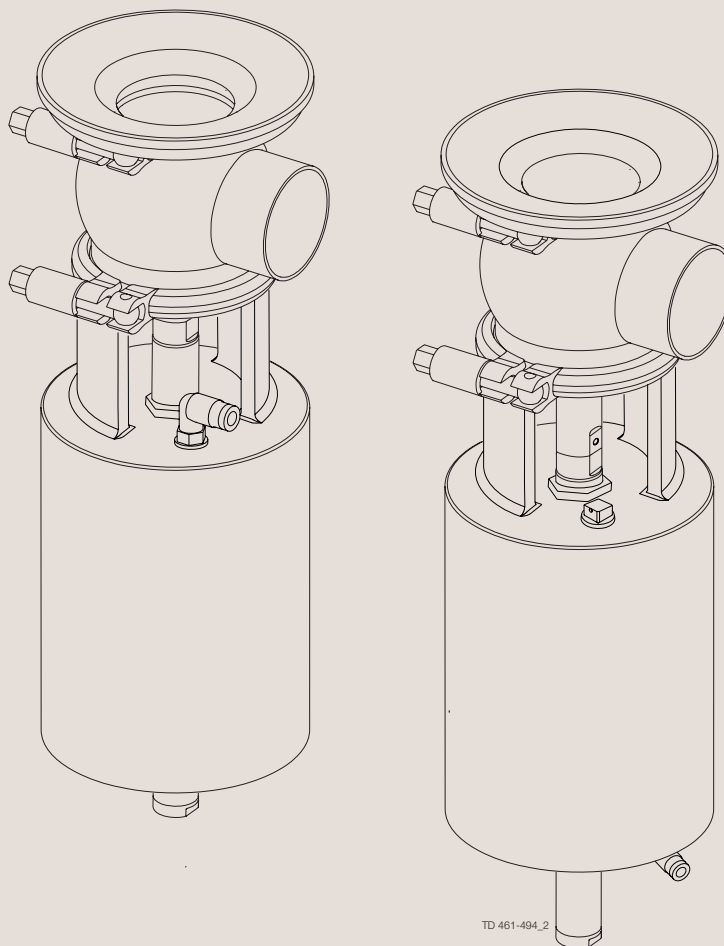


ESE00676-EN3

2011-03

Original manual

The information herein is correct at the time of issue but may be subject to change without prior notice

1. Unique Single Seat Valve - Tank Outlet Valve 51-101.6 mm/DN50-100	4
2. Unique Single Seat Valve - RA Tank Outlet Valve 51-101.6 mm/DN50-100	6
3. Mounting Tool - Unique Single Seat Valve - Tank Outlet Valve	8

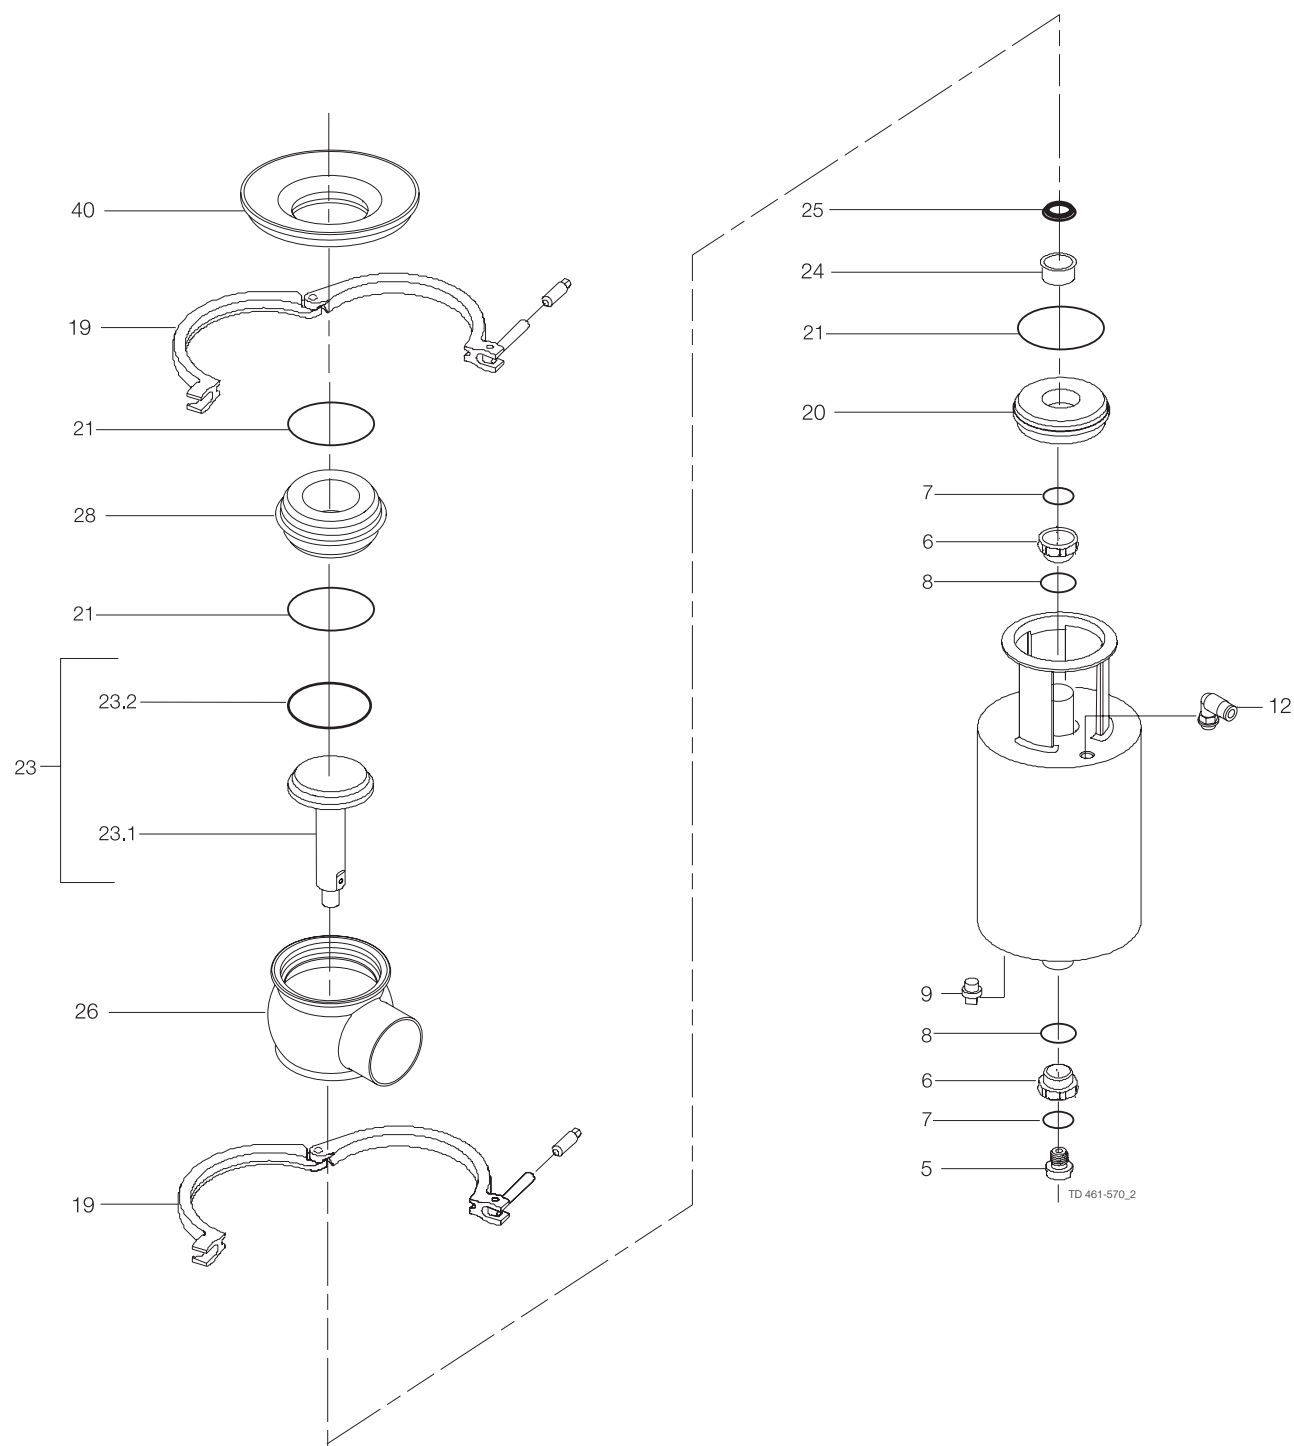

Unique Single Seat Valve - Tank Outlet Valve 51-101.6 mm/DN50-100

Pos	Qty	Denomination	DN 50 51 mm	DN 65 63.5 mm	DN 80 76.1 mm	DN 100 101.6 mm
Actuator						
		Actuator, complete (NO)	9613-1548-02	9613-1548-03	9613-1548-04	9613-1548-05
		Actuator, complete (NC)	9613-1548-07	9613-1548-08	9613-1548-09	9613-1548-10
		Actuator, complete (A/A)	9613-1548-12	9613-1548-13	9613-1548-14	9613-1548-15
5	1	Adapter	9613-1274-01	9613-1274-01	9613-1274-01	9613-1274-01
6	□	2 Bushing				
7	□	2 O-ring				
8	□	2 O-ring				
9	1	Plug	9613-4141-01	9613-4141-01	9613-4141-01	9613-4141-01
12	1(2)	Air fitting	9611-99-1988	9611-99-1988	9611-99-1988	9611-99-1988
Clamp						
19	2	Clamp	9612-9393-04	9612-9393-05	9612-9393-06	9612-9393-07
Bonnet						
20	1	Bonnet	9613-1271-03	9613-1271-04	9613-1271-05	9613-1271-06
21	◆	3 O-ring, EPDM (standard)				
	3	O-ring, HNBR				
	3	O-ring, FPM				
		O-ring set (10 pcs.) EPDM	9614-0594-25	9614-0594-28	9614-0594-31	9614-0594-34
		O-ring set (10 pcs.) HNBR	9614-0594-26	9614-0594-29	9614-0594-32	9614-0594-35
		O-ring set (10 pcs.) FPM	9614-0594-27	9614-0594-30	9614-0594-33	9614-0594-36
24	1	Bushing	9613-1250-02	9613-1250-02	9613-1250-02	9613-1250-02
25	◆	1 Lip seal, EPDM (standard)				
	1	Lip seal, HNBR				
	1	Lip seal, FPM				
		Lip seal set (10 pcs.) EPDM	9614-0594-19	9614-0594-19	9614-0594-19	9614-0594-19
		Lip seal set (10 pcs.) HNBR	9614-0594-20	9614-0594-20	9614-0594-20	9614-0594-20
		Lip seal set (10 pcs.) FPM	9614-0594-21	9614-0594-21	9614-0594-21	9614-0594-21
Seat						
28	1	Seat	9613-1275-03	9613-1275-04	9613-1275-05	9613-1275-06
Valve Body						
26	1	Valve body, upper, 1 port ISO	9613-1393-05	9613-1393-07	9613-1393-09	9613-1393-11
	1	Valve body, upper, 2 ports ISO	9613-1393-06	9613-1393-08	9613-1393-10	9613-1393-12
	1	Valve body, upper, 1 port DIN	9613-1394-05	9613-1394-07	9613-1394-09	9613-1394-11
	1	Valve body, upper, 2 ports DIN	9613-1394-06	9613-1394-08	9613-1394-10	9613-1394-12
Tank flange						
40	1	Tank flange	9634-0699-01	9634-0700-01	9634-0701-01	9634-0702-01
Valve Plug						
23	1	Plug, shut off, ISO, complete, EPDM (standard)	9613-1388-03	9613-1388-04	9613-1388-05	9613-1388-06
	1	Plug, shut off, ISO, complete, HNBR	9613-1388-15	9613-1388-16	9613-1388-17	9613-1388-18
	1	Plug, shut off, ISO, complete, FPM	9613-1388-27	9613-1388-28	9613-1388-29	9613-1388-30
	1	Plug, shut off, DIN, complete, EPDM (standard)	9613-1388-09	9613-1388-10	9613-1388-11	9613-1388-12
	1	Plug, shut off, DIN, complete, HNBR	9613-1388-21	9613-1388-22	9613-1388-23	9613-1388-24
	1	Plug, shut off, DIN, complete, FPM	9613-1388-33	9613-1388-34	9613-1388-35	9613-1388-36
23.1	1	Plug, shut off, ISO	9613-1398-03	9613-1398-04	9613-1398-05	9613-1398-06
	1	Plug, shut off, DIN	9613-1398-09	9613-1398-10	9613-1398-11	9613-1398-12
23.2◆	1	Plug seal, EPDM (standard)				
	1	Plug seal, HNBR				
	1	Plug seal, FPM				
		Plug seal set (10 pcs.) EPDM	9614-0594-07	9614-0594-10	9614-0594-13	9614-0594-16
		Plug seal set (10 pcs.) HNBR	9614-0594-08	9614-0594-11	9614-0594-14	9614-0594-17
		Plug seal set (10 pcs.) FPM	9614-0594-09	9614-0594-12	9614-0594-15	9614-0594-18
			DN 50 51 mm	DN 65 63.5 mm	DN 80 76.1 mm	DN 100 101.6 mm

Service kit for Actuator


□	Service kit	9611-92-6500	9611-92-6500	9611-92-6500	9611-92-6500
---	-------------------	--------------	--------------	--------------	--------------

Service kit for Product wetted parts, standard

◆	Service kit, EPDM	9611-92-6701	9611-92-6702	9611-92-6703	9611-92-6704
◆	Service kit, HNBR	9611-92-6705	9611-92-6706	9611-92-6707	9611-92-6708
◆	Service kit, FPM	9611-92-6709	9611-92-6710	9611-92-6711	9611-92-6712

Parts marked with ◀◆ are included in the service kits.

Recommended spare parts: Service kits.

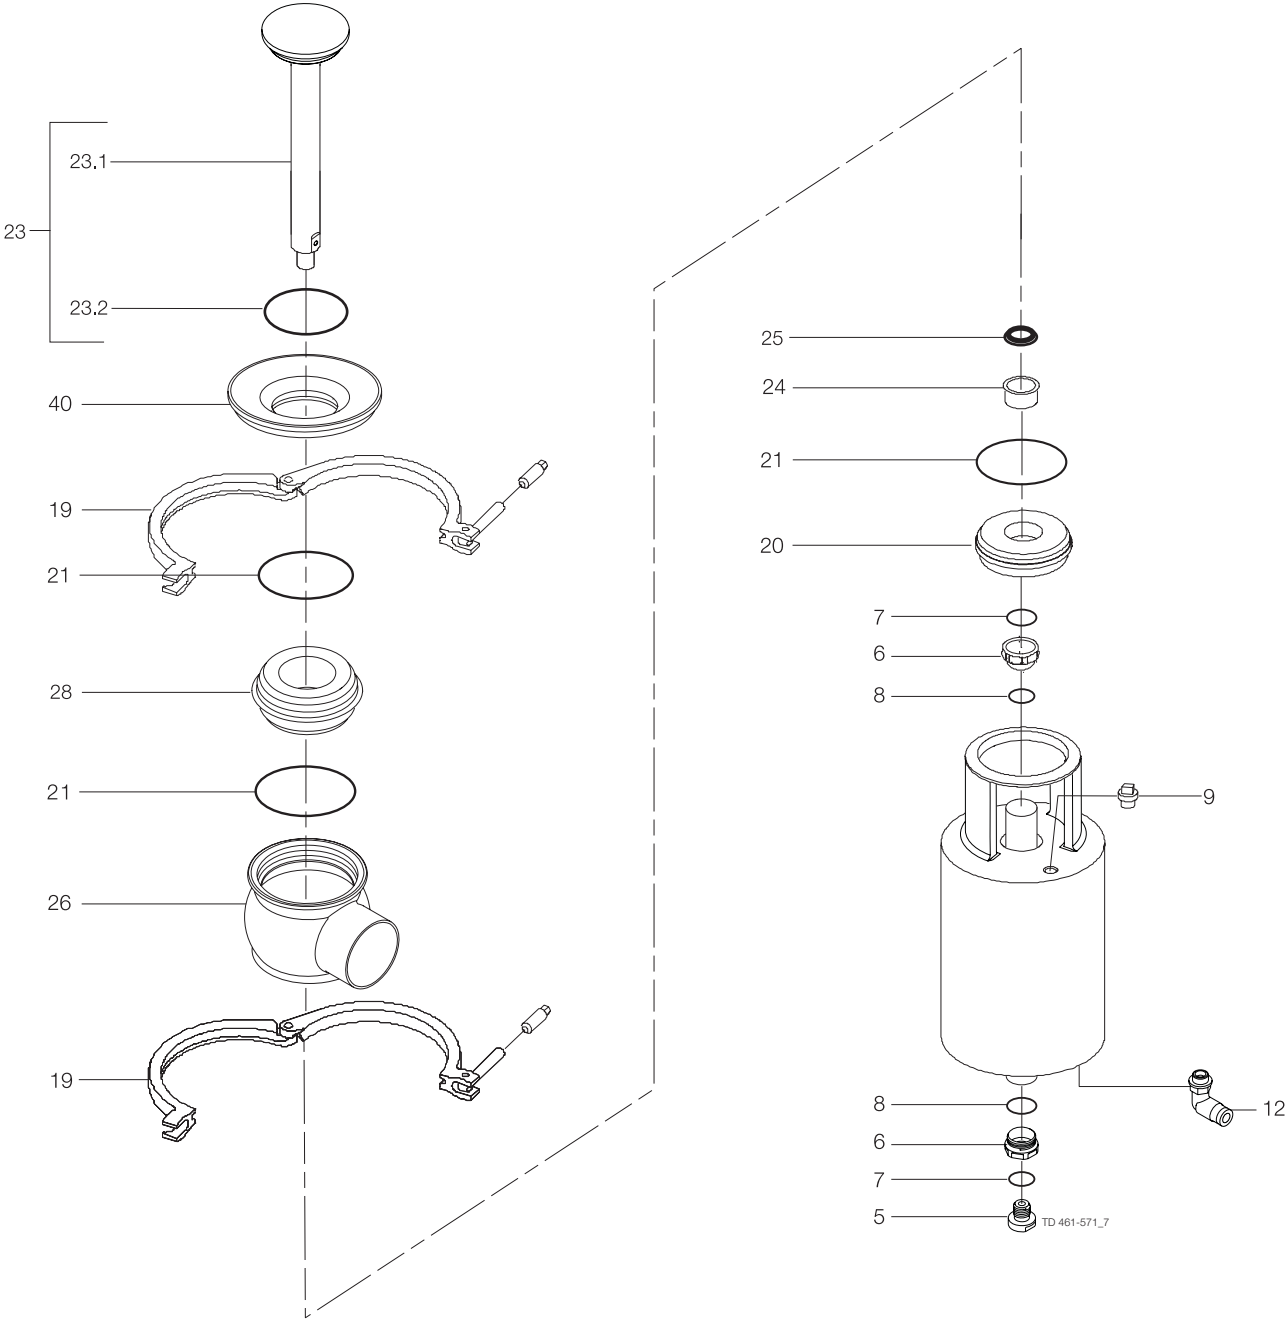

Unique Single Seat Valve - RA Tank Outlet Valve 51-101.6 mm/DN50-100

Pos	Qty	Denomination	DN 50 51 mm	DN 65 63.5 mm	DN 80 76.1 mm	DN 100 101.6 mm
Actuator						
		Actuator, complete (NO-RA)	9613-1548-07	9613-1548-08	9613-1548-09	9613-1548-10
		Actuator, complete (NC-RA)	9613-1548-02	9613-1548-03	9613-1548-04	9613-1548-05
		Actuator, complete (A/A)	9613-1548-12	9613-1548-13	9613-1548-14	9613-1548-15
5	1	Adapter	9613-1274-01	9613-1274-01	9613-1274-01	9613-1274-01
6	□	2 Bushing				
7	□	2 O-ring				
8	□	2 O-ring				
9	1	Plug	9613-4141-01	9613-4141-01	9613-4141-01	9613-4141-01
12	1(2)	Air fitting	9611-99-1988	9611-99-1988	9611-99-1988	9611-99-1988
Clamp						
19	2	Clamp	9612-9393-04	9612-9393-05	9612-9393-06	9612-9393-07
Bonnet						
20	1	Bonnet	9613-1271-03	9613-1271-04	9613-1271-05	9613-1271-06
21	◆	3 O-ring, EPDM (standard)				
	3	O-ring, HNBR				
	3	O-ring, FPM				
		O-ring set (10 pcs.) EPDM	9614-0594-25	9614-0594-28	9614-0594-31	9614-0594-34
		O-ring set (10 pcs.) HNBR	9614-0594-26	9614-0594-29	9614-0594-32	9614-0594-35
		O-ring set (10 pcs.) FPM	9614-0594-27	9614-0594-30	9614-0594-33	9614-0594-36
24	1	Bushing	9613-1250-02	9613-1250-02	9613-1250-02	9613-1250-02
25	◆	1 Lip seal, EPDM (standard)				
	1	Lip seal, HNBR				
	1	Lip seal, FPM				
		Lip seal set (10 pcs.) EPDM	9614-0594-19	9614-0594-19	9614-0594-19	9614-0594-19
		Lip seal set (10 pcs.) HNBR	9614-0594-20	9614-0594-20	9614-0594-20	9614-0594-20
		Lip seal set (10 pcs.) FPM	9614-0594-21	9614-0594-21	9614-0594-21	9614-0594-21
Seat						
28	1	Seat	9613-1275-03	9613-1275-04	9613-1275-05	9613-1275-06
Valve Body						
26	1	Valve body, upper, 1 port ISO	9613-1393-05	9613-1393-07	9613-1393-09	9613-1393-11
	1	Valve body, upper, 2 ports ISO	9613-1393-06	9613-1393-08	9613-1393-10	9613-1393-12
	1	Valve body, upper, 1 port DIN	9613-1394-05	9613-1394-07	9613-1394-09	9613-1394-11
	1	Valve body, upper, 2 ports DIN	9613-1394-06	9613-1394-08	9613-1394-10	9613-1394-12
Tank flange						
40	1	Tank flange	9634-0699-01	9634-0700-01	9634-0701-01	9634-0702-01
Valve Plug						
23	1	Plug, shut off RA, ISO, complete, EPDM (standard)	9613-1276-03	9613-1276-04	9613-1276-05	9613-1276-06
	1	Plug, shut off RA, ISO, complete, HNBR	9613-1276-15	9613-1276-16	9613-1276-17	9613-1276-18
	1	Plug, shut off RA, ISO, complete, FPM	9613-1276-27	9613-1276-28	9613-1276-29	9613-1276-30
	1	Plug, shut off RA, DIN, complete, EPDM (standard)	9613-1276-09	9613-1276-10	9613-1276-11	9613-1276-12
	1	Plug, shut off RA, DIN, complete, HNBR	9613-1276-21	9613-1276-22	9613-1276-23	9613-1276-24
	1	Plug, shut off RA, DIN, complete, FPM	9613-1276-33	9613-1276-34	9613-1276-35	9613-1276-36
23.1	1	Plug, shut off RA, ISO	9613-1399-03	9613-1399-04	9613-1399-05	9613-1399-06
	1	Plug, shut off RA, DIN	9613-1399-09	9613-1399-10	9613-1399-11	9613-1399-12
23.2◆	1	Plug seal, EPDM (standard)				
	1	Plug seal, HNBR				
	1	Plug seal, FPM				
		Plug seal set (10 pcs.) EPDM	9614-0594-07	9614-0594-10	9614-0594-13	9614-0594-16
		Plug seal set (10 pcs.) HNBR	9614-0594-08	9614-0594-11	9614-0594-14	9614-0594-17
		Plug seal set (10 pcs.) FPM	9614-0594-09	9614-0594-12	9614-0594-15	9614-0594-18
			DN 50 51 mm	DN 65 63.5 mm	DN 80 76.1 mm	DN 100 101.6 mm

Service kit for Actuator



□	Service kit	9611-92-6500	9611-92-6500	9611-92-6500	9611-92-6500
---	-------------------	--------------	--------------	--------------	--------------

Service kit for Product wetted parts, standard

◆	Service kit, EPDM	9611-92-6701	9611-92-6702	9611-92-6703	9611-92-6704
◆	Service kit, HNBR	9611-92-6705	9611-92-6706	9611-92-6707	9611-92-6708
◆	Service kit, FPM	9611-92-6709	9611-92-6710	9611-92-6711	9611-92-6712

Parts marked with ◀◆ are included in the service kits.

Recommended spare parts: Service kits.

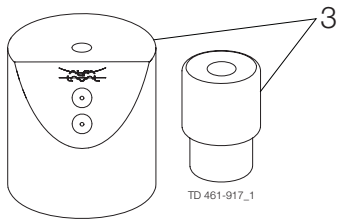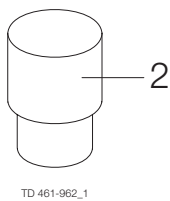

Mounting Tool - Unique Single Seat Valve - Tank Outlet Valve

Pos	Qty	Denomination	DN 50-100
			51-101.6 mm
2	1	Tool for bushing (pos. 24)	9613-1609-01

Pos	Qty	Denomination	DN 50	DN 65	DN 80	DN 100
			51 mm	63.5 mm	76.1 mm	101.6 mm
3	1	Mounting tool for elastomer plug seals	9613-1729-02	9613-1729-02	9613-1729-03	9613-1729-03

TD 900-522

How to contact Alfa Laval

Contact details for all countries are continually updated on our website.

Please visit www.alfalaval.com to access the information directly.

© Alfa Laval Corporate AB

This document and its contents is owned by Alfa Laval Corporate AB and protected by laws governing intellectual property and thereto related rights. It is the responsibility of the user of this document to comply with all applicable intellectual property laws. Without limiting any rights related to this document, no part of this document may be copied, reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), or for any purpose, without the expressed permission of Alfa Laval Corporate AB. Alfa Laval Corporate AB will enforce its rights related to this document to the fullest extent of the law, including the seeking of criminal prosecution.